



Intevi Digital Television

How to Setup the Amino STB For an IDT Server



STEP-BY-STEP

Setup an Amino for an IDT Server

1.

Connect the Amino STB (140 or 150) to the network and HDMI display.

2.

Connect Amino STB to power.



3.

Once the Amino boots, enter the IDR server IP Address using the IR remote control.



4.


If you make an error in entering the correct information, just use the left and right arrow keys to select the box, then press the "x" key to delete the entry. Then enter the correct address.

5.

Press OK to Apply the new IDT Server Address.

6.

The Amino will now register with the IDT Server. Set the correct Time Zone and reboot.

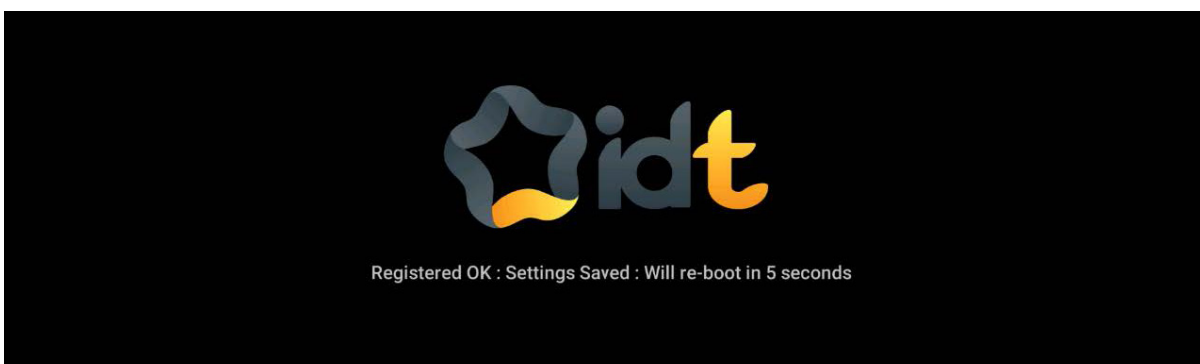


7.

It will then validate the Network Time Protocol.



8.

After registration with the IDT Server it will check to see if it has been assigned to any Endpoint Groups, if not yet assigned it will display this page until it has been assigned to an Endpoint Group.

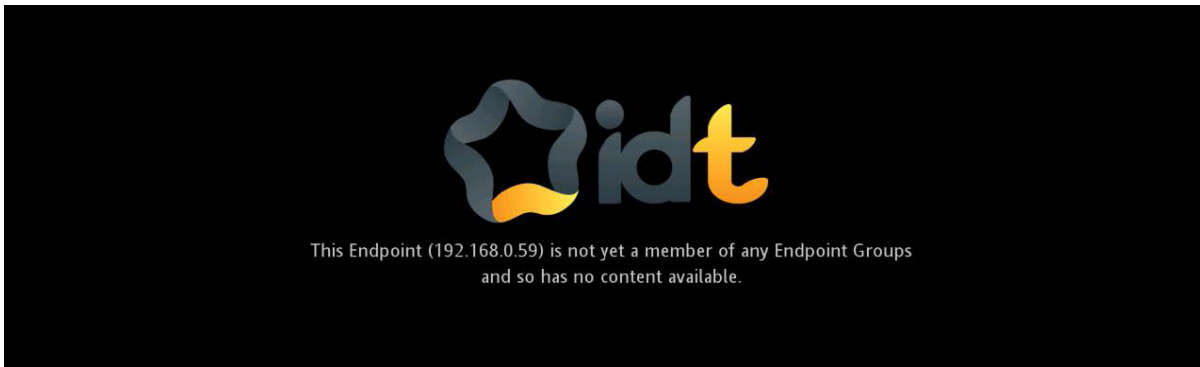


9.

Information on how to Configure Endpoints and Endpoint Groups can be found in the IDT Server Administration Guide.

10.

Once assigned to an Endpoint Group it will automatically load the Template and Channel. Setup is now complete.

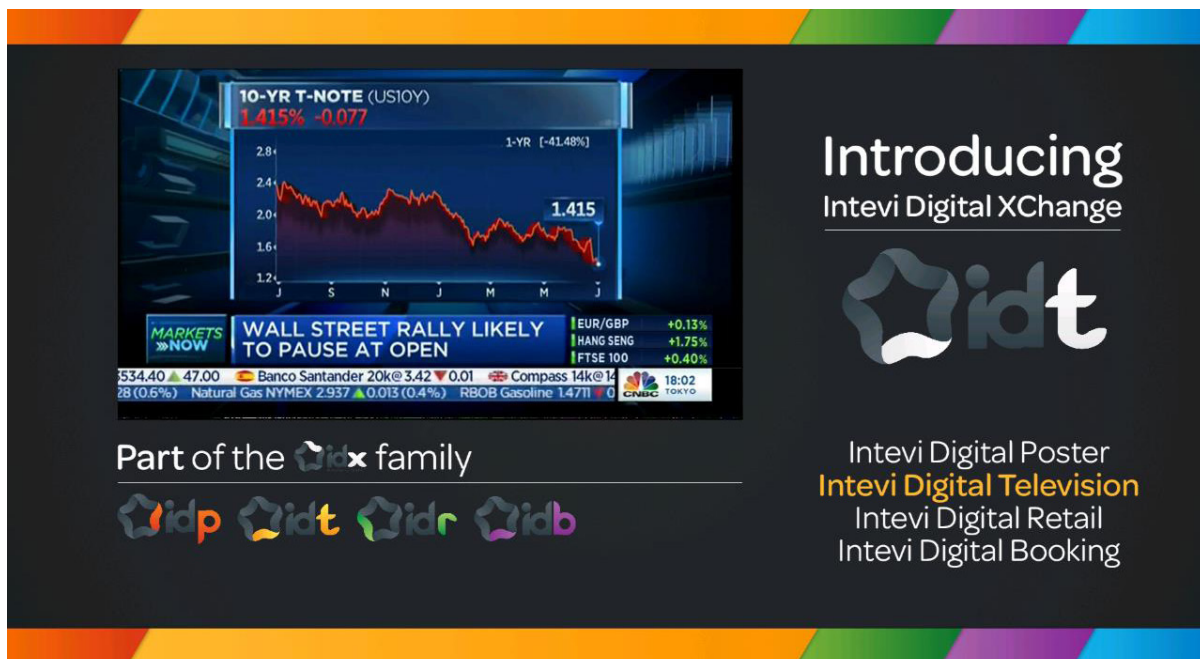

Get In Touch

Online:

www.intevi.co.uk

www.idx.uk.com

By Phone:

0203 005 3755

Address:

Unit 5, Meridian Office Park, Hook, Hampshire, RG27 9HY, UK

1250 Broadway, 36th Floor, New York, NY, 10001, USA